 


Instruction Manual

MANUAL HEIGHT ADJUSTABLE TV TROLLEY

Professional Mobile Cart for Extra Large TV or Smart Board and
Video Conference Room Solution

 
 
 
ARKIN

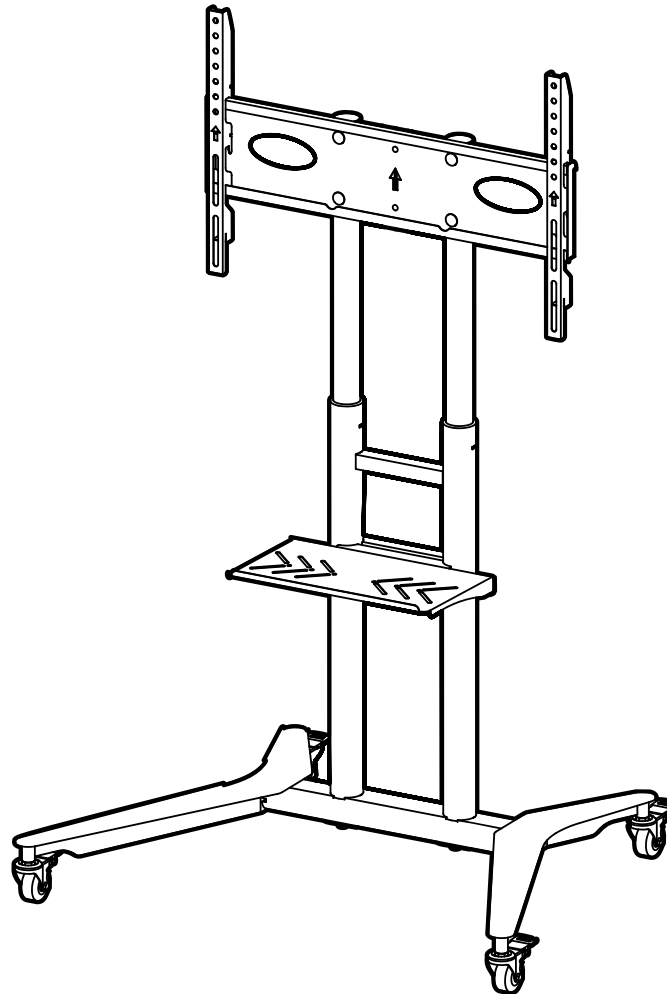

AR-TR-3275-60

VESA Compatible
From 200x200
up to 600x400



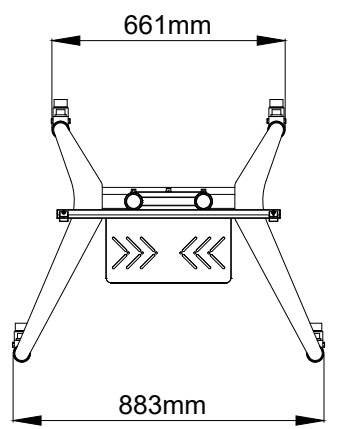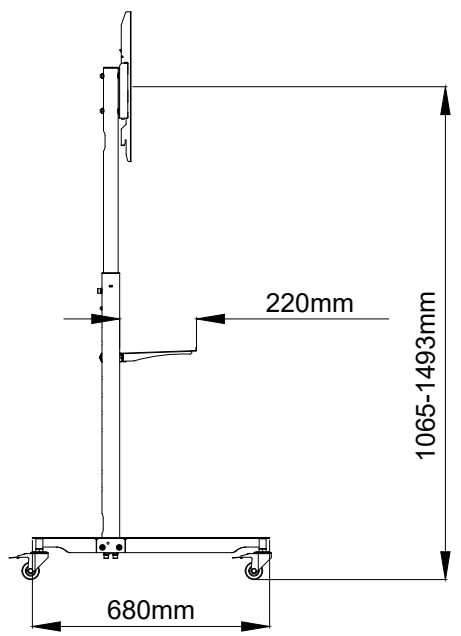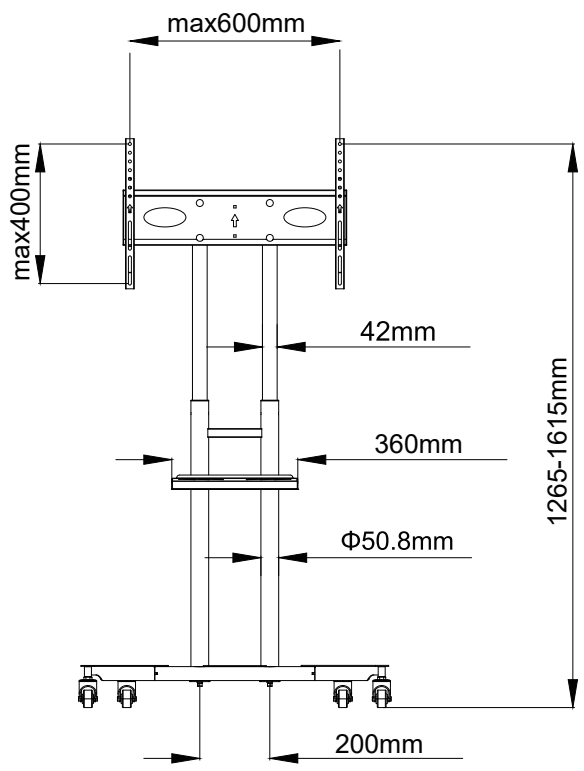


AR-TR-3275-60




Load capacity
60 kg

DVD Shelf loading
5 kg

 TV size
32" - 75"

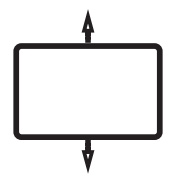

Height adjustment
1065-1493mm

 

VESA Standard
200x200 up to 600x400mm

Thank you for choosing Arkin !

We want you to be completely satisfied with your new trolley. If you have any questions, issues or concerns please contact us via arkin.com.au or email info@arkin.com.au

Feel free to share your thoughts or ideas about our products. Help us continue to deliver the highest quality designs.

IMPORTANT

BEFORE installation use the checklist to verify that all components are included. If any parts are missing or appear defective contact our customer service team for a replacement.

Ensure that the screen is compatible with the unit BEFORE attaching to the mounting bracket according to VESA patterns and the supported weight of the screen.

 
 
Specialist assistance may be required for installation.

CAUTION


Please read the entire instructions and safety guidelines prior to assembly.

Failure to do so may cause injury or damage to product.


- Always wear suitable personal protective equipment and use the correct tools to perform the installation safely.
- DO NOT exceed the maximum permissible weight of the trolley, make modifications or use the trolley outside. Be careful not to overtighten fixings.
- Use only the factory provided mounting screws as indicated in the instructions.
- Ensure the construction of attaching surfaces has structural integrity capable of supporting the total weight of the trolley and additional equipment.
- Keep children away from the assembly hardware, small parts may cause choking if swallowed.

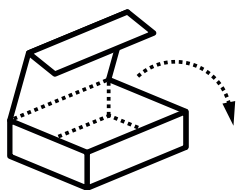


A (x2)

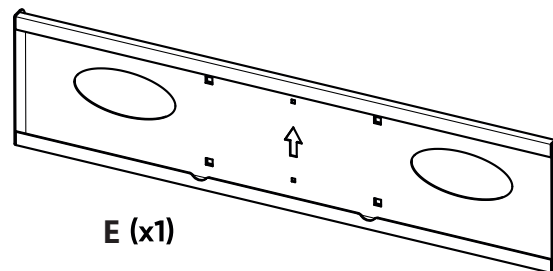 


E (x1)

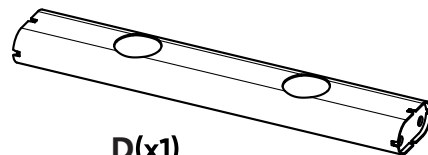 


D(x1)

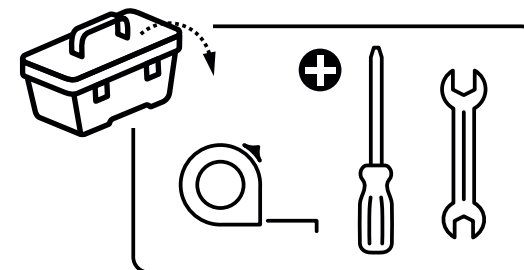 


* Tools not supplied (BYO)

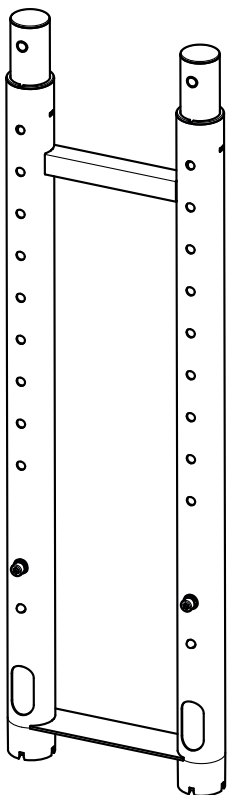 


F (x1)

 


G(x1)

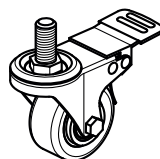 


H(x4)
Ø50 mm

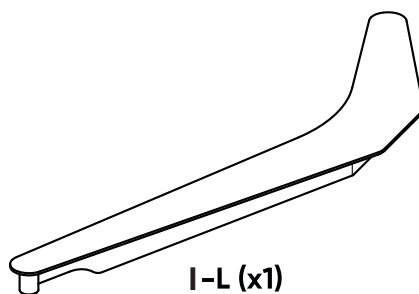 



I-L (x1)

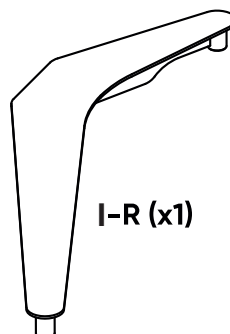 


I-R (x1)

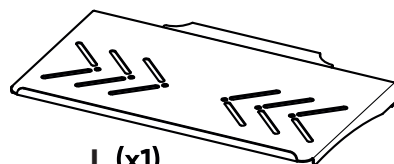 


J (x1)

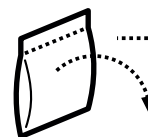  

A1
M8x25 (x8)

 

B1
M8x45 (x1)

 

C1
M8x55 (x4)



D1
M6x12 (x2)



 
E1
M8 (x4)



F1
D8 (x8)



G1
8x16x1.5 (x9)

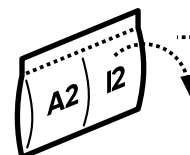

A2
M5x25 (x4)



B2
M6x25 (x4)



C2
M8x25 (x4)



D2
6x16x1.5 (x4)



E2
15x8.2x10 (x4)



 
F2
S5 (x1)



G2
S6 (x1)





H2
S7-S13 (x1)


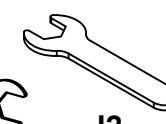


I2
S18 (x1)

 
 
1 Base assembly

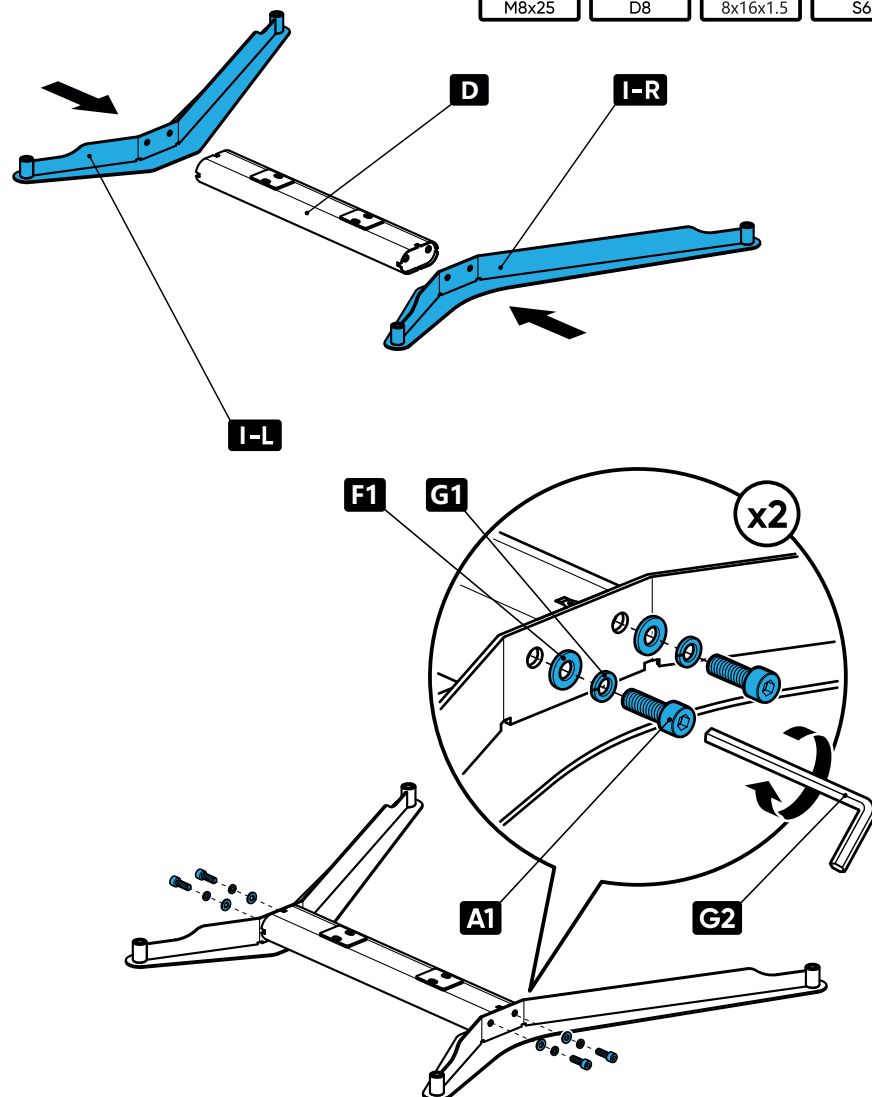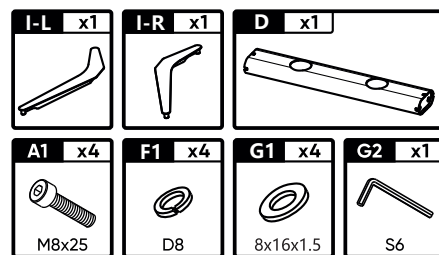


2

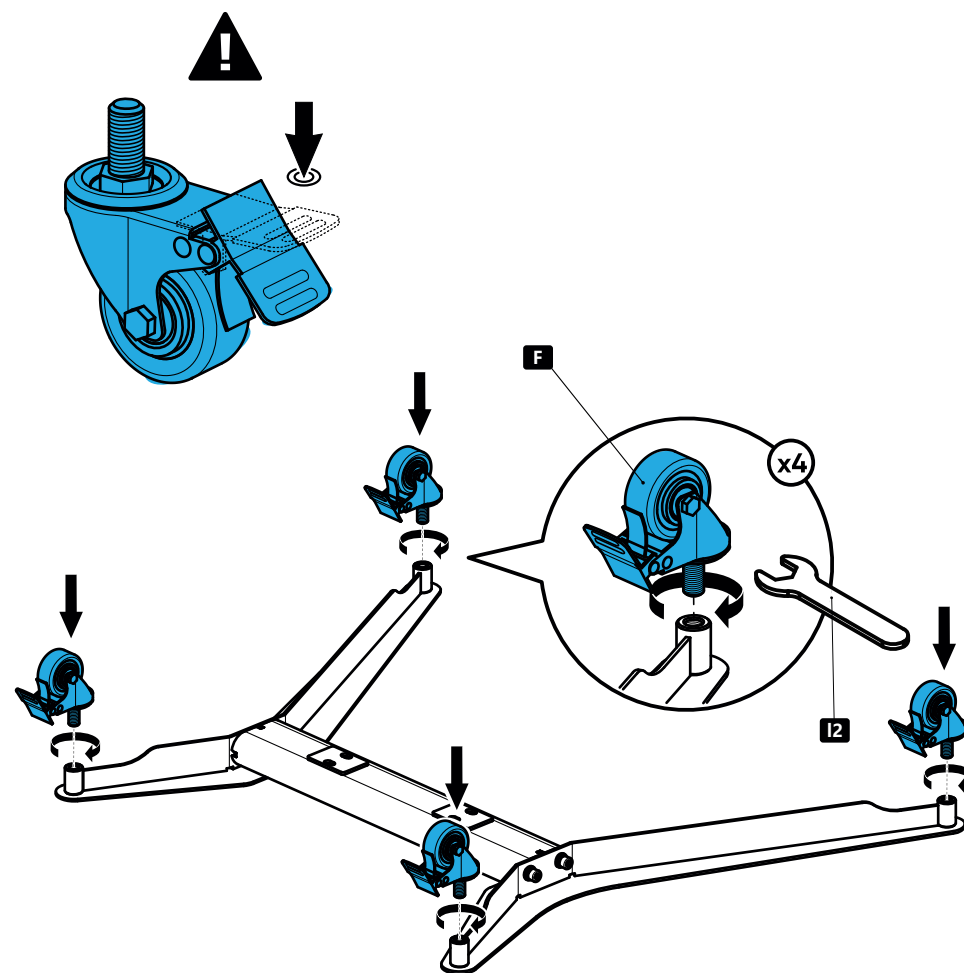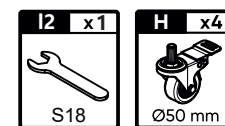  


3 Column Installation

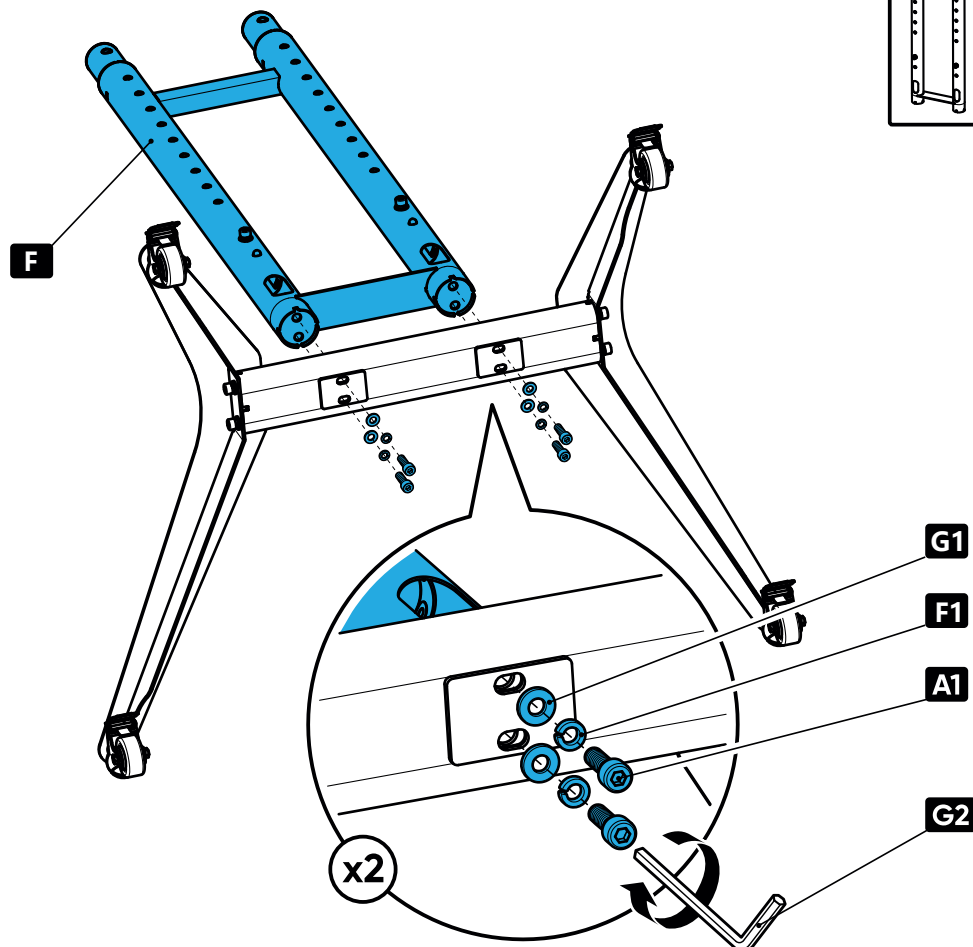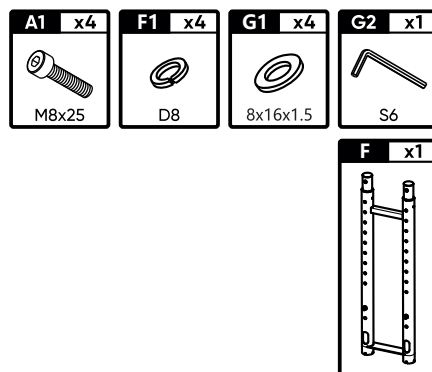  



4 Height adjustment

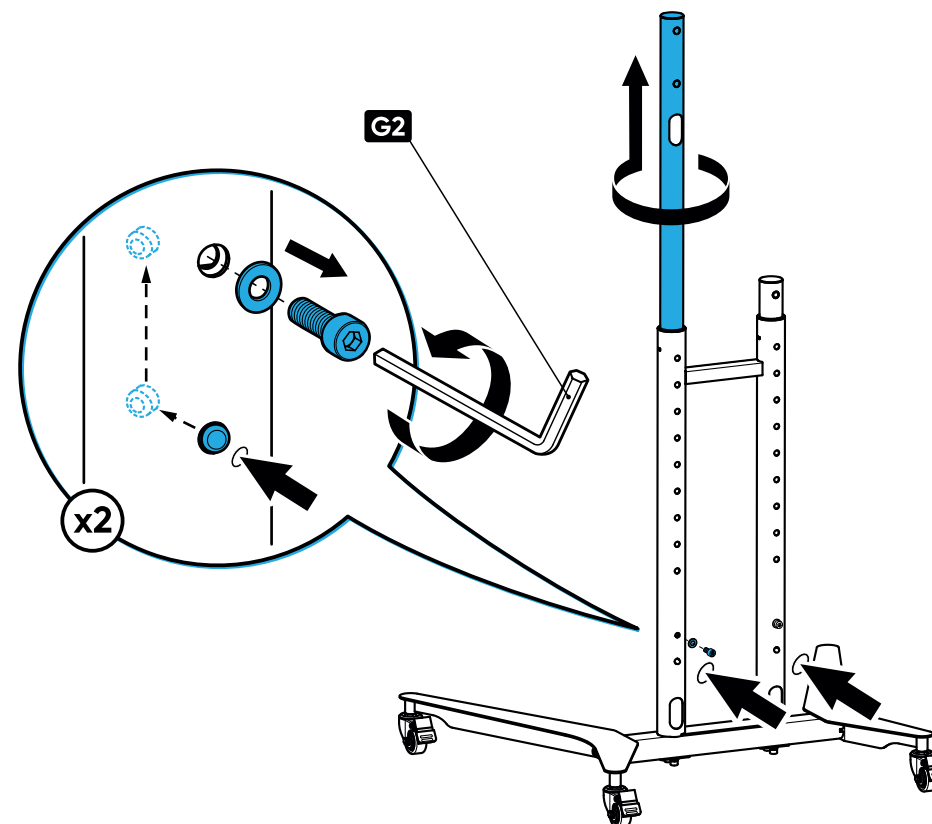 


 
ATTENTION! In order to avoid accidents, two people should participate in the installation and adjustment of the TV/touchscreen panel.





5

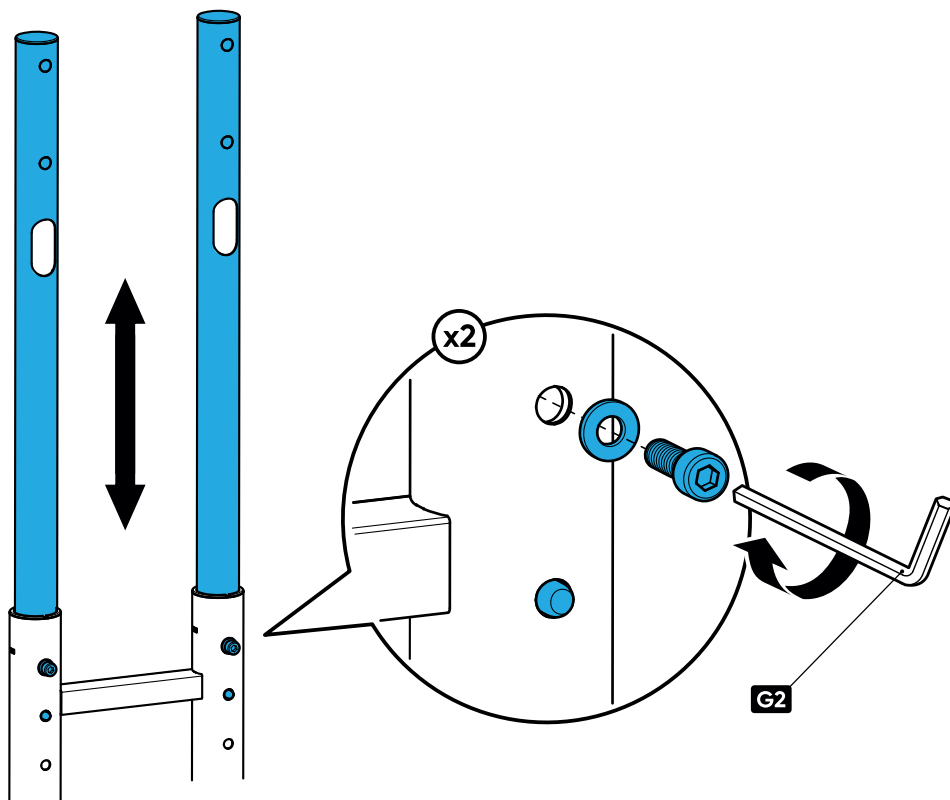  


6 VESA Panel Mounting

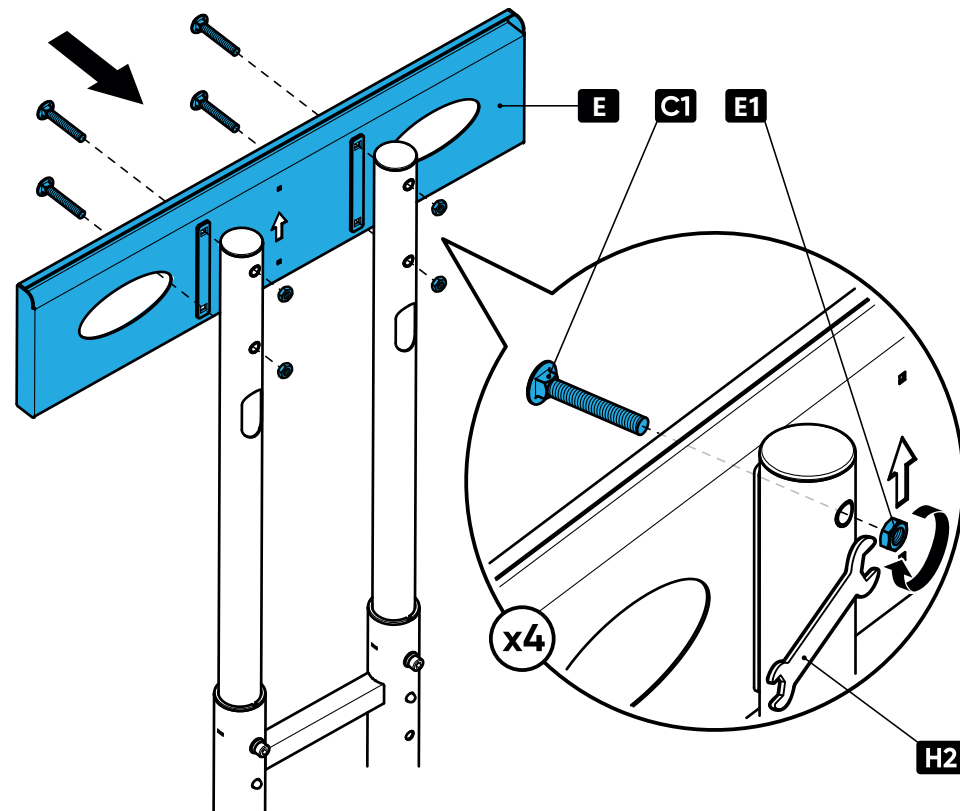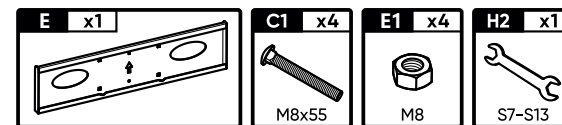  



7 Shelf Installation

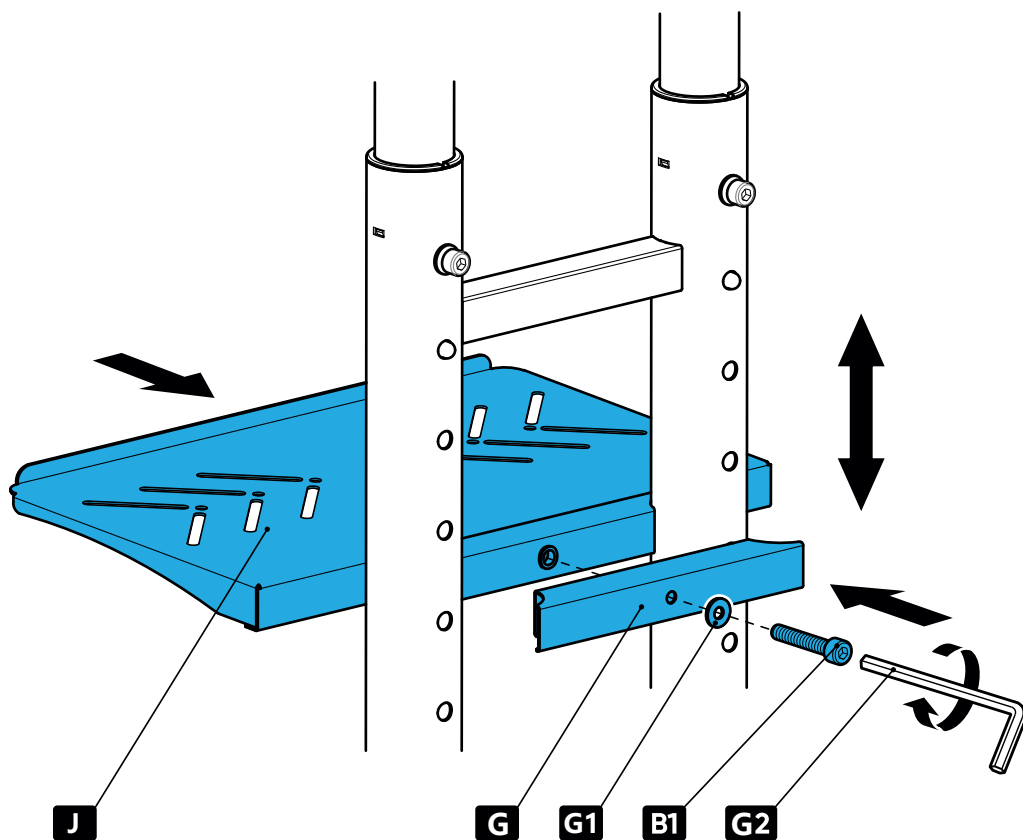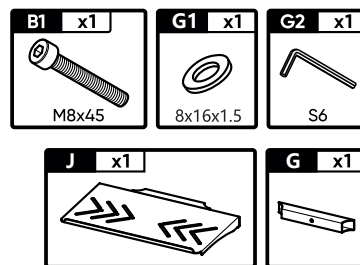  





8 Measure Your TV Hole Pattern

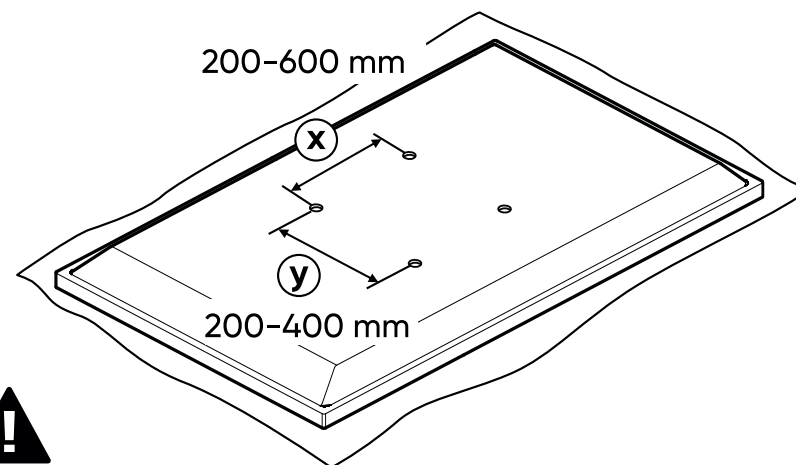 

9 Suitable Screws

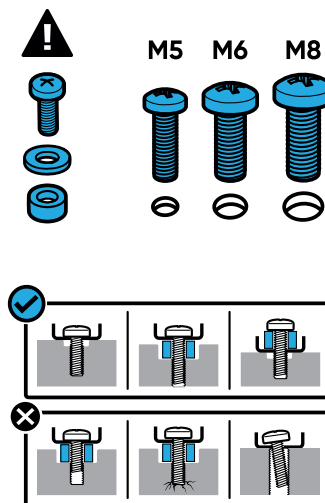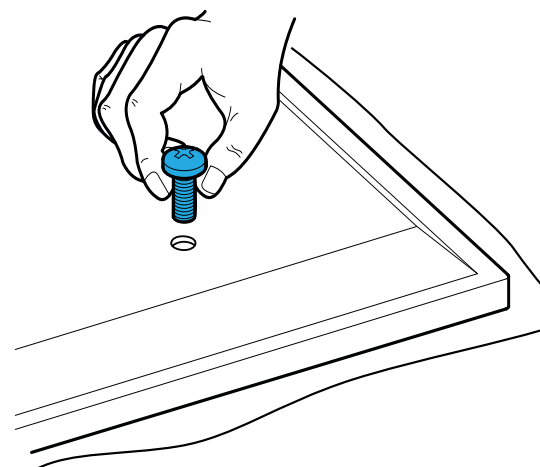  


10 Spacer Selection

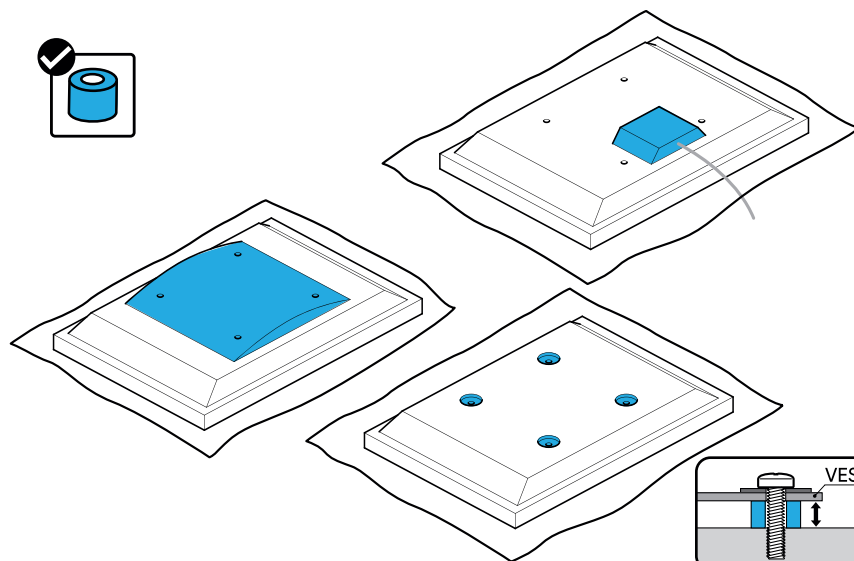  
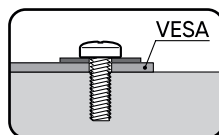 
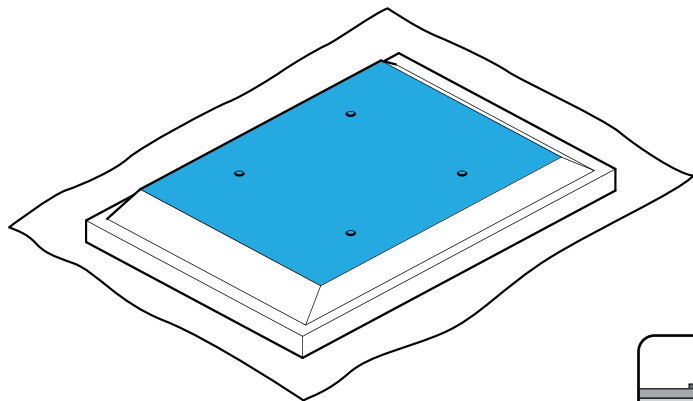 


11 Arm Installation

A2	x4	B2	x4	C2	x4	D2	x4	E2	x4
M5x25		M6x25		M8x25		6x16x1.5		15x8.2x10	


 


VESA (mm)
200x200-600x400mm

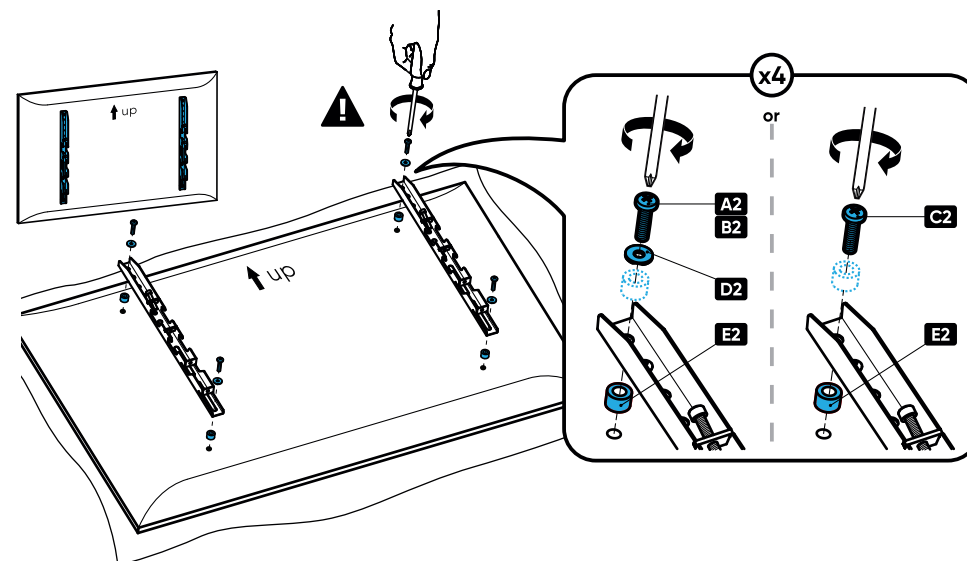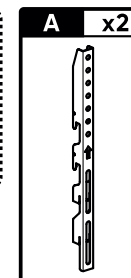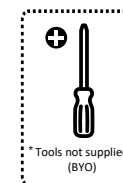   


ATTENTION! All screws must be securely tightened.
DO NOT OVERTIGHTEN THEM!

  
12 Screen Installation

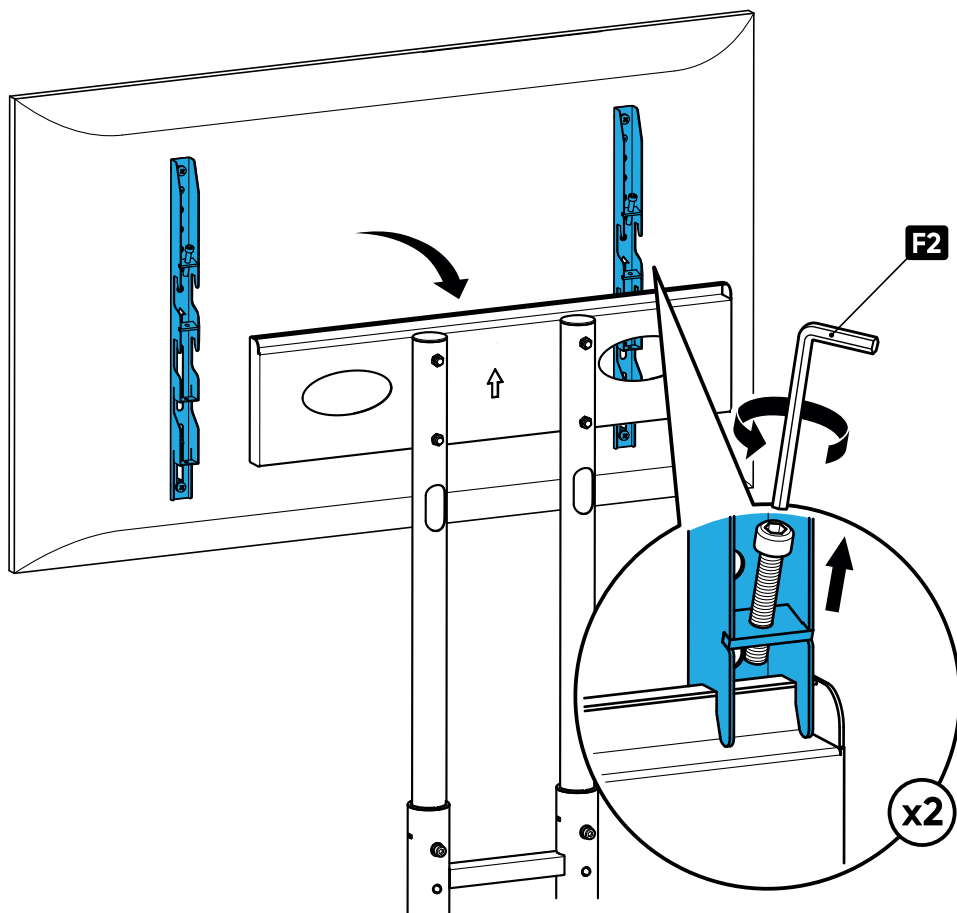



13

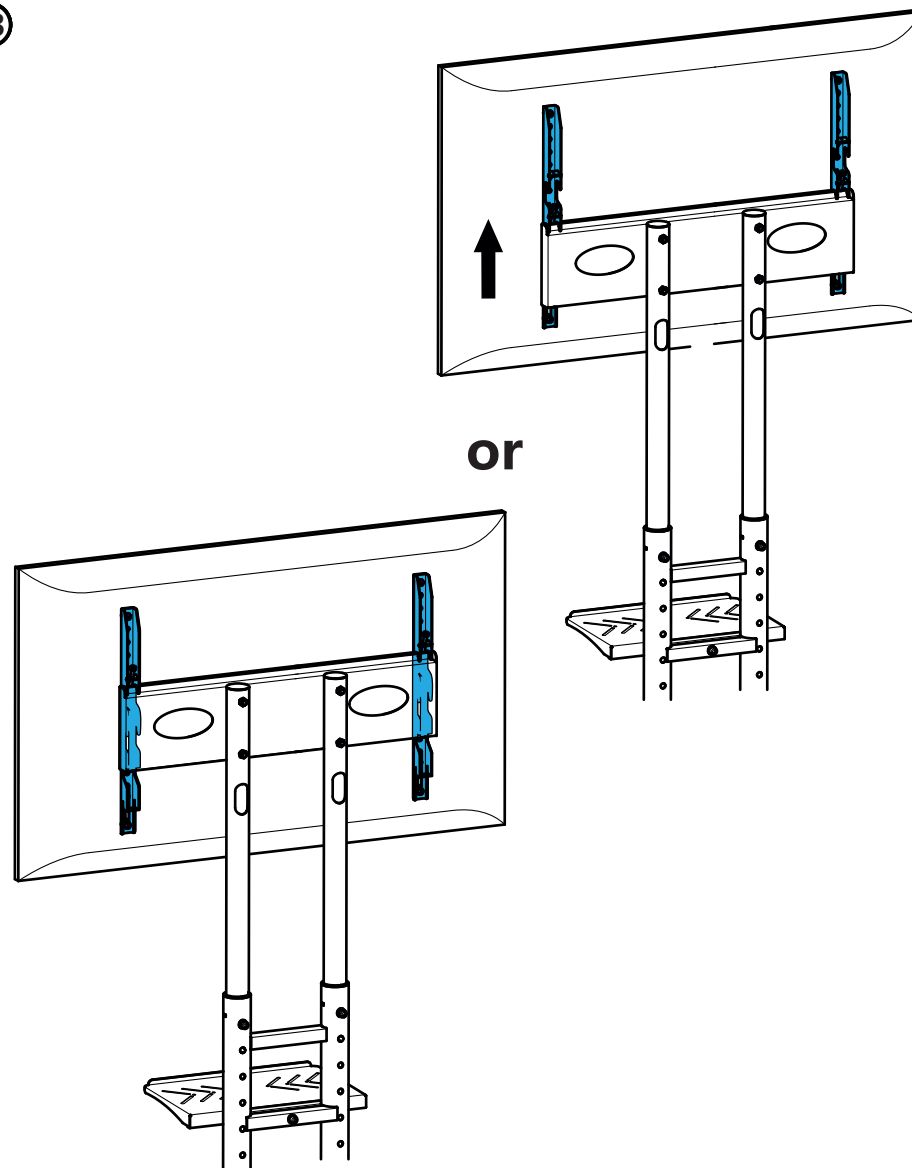 

 ATTENTION! In order to avoid accidents, two people should participate in the installation and adjustment of the TV/touchscreen panel.




14

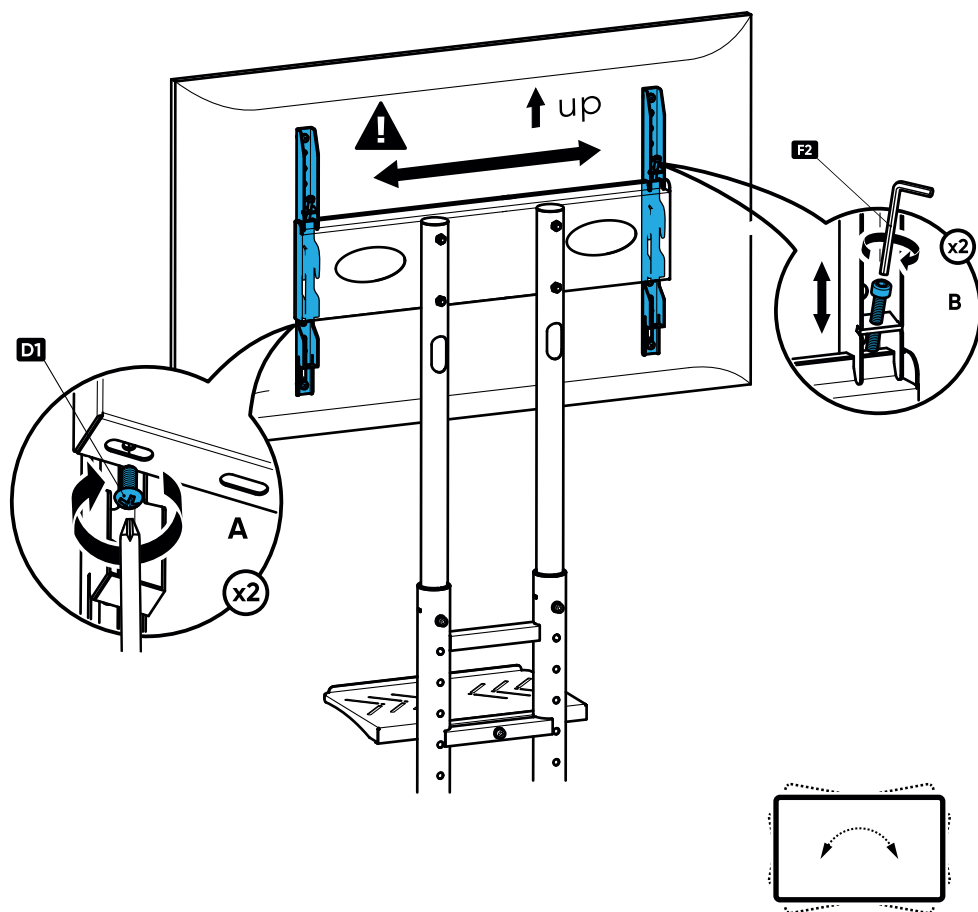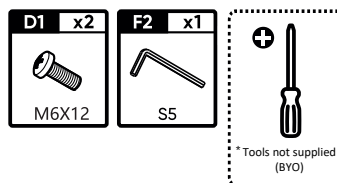  

Align the screen to the centre of the VESA plate

15

 Cable management

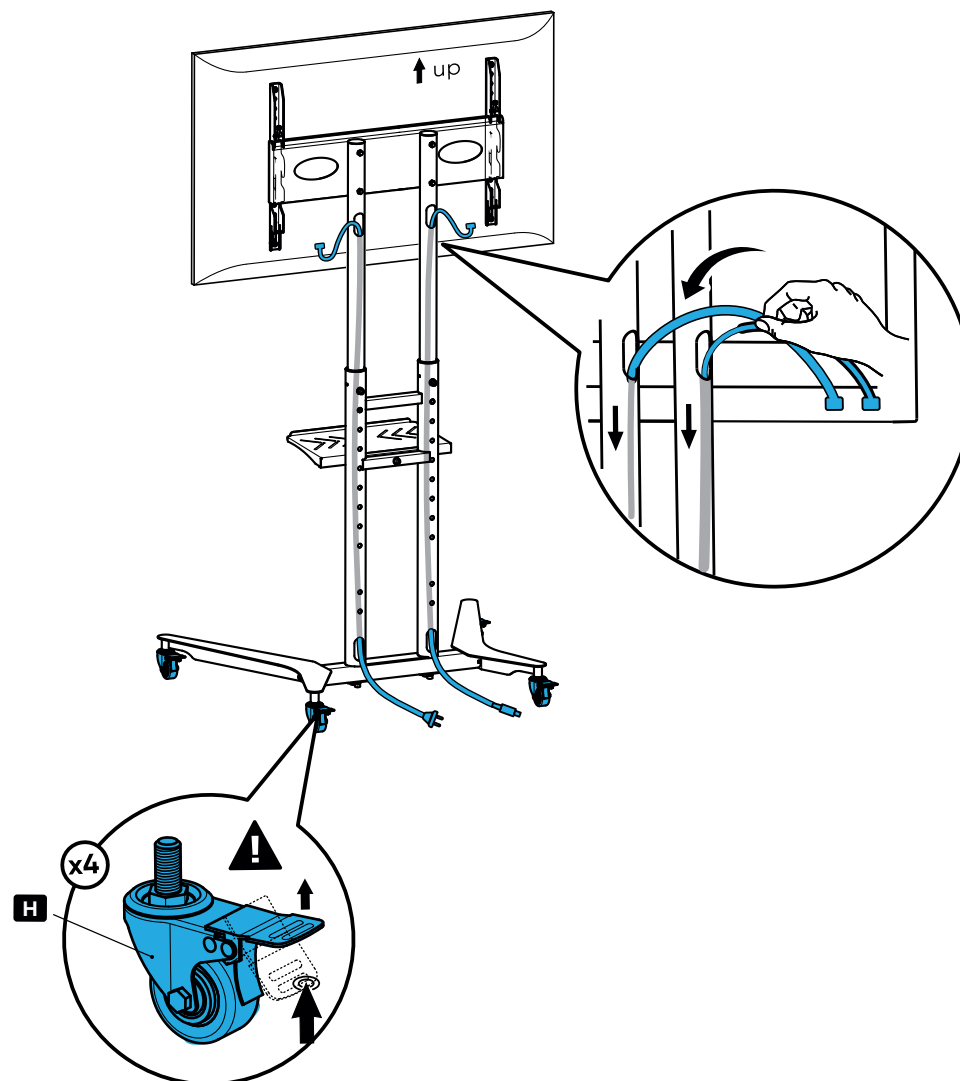

OPERATING INSTRUCTIONS.

OPERATION AND STORAGE REQUIREMENTS:

- The air temperature during storage and operation should be from +5°C to +40°C., humidity in the room should not exceed 80% and free of aggressive impurities (acid vapours, alkalis, other chemically active substances) which may cause corrosion.
- Direct sunlight exposure to the elements of the product is not allowed. Avoid dust, dirt, shock, moisture, fire and mechanical damage.
- It is best to not place the product closer than 1m to heating elements, as well as near an open fire
- The product must be placed on a flat, horizontal surface with all the wheels in the locked position.
- Dragging the trolley in locked position may cause mechanical damage.
- Do not allow children to unlock the wheels, as we as perform any other manipulations with the product. Do not allow children to play near the product.
- Do not push, pull or hang on the product with the screen as it may fall. Do not allow children to hang or swing the product with the screen. The product with screen installed may tip over and cause serious and even fatal injuries.
- Do not exert excessive force on the elements of the product, do not stand with your feet on the base of the product. If you notice any malfunction, you should immediately contact our customer service team.

OPERATING INSTRUCTIONS.

MAINTENANCE:

Dry or wet cleaning should be carried out using only neutral detergents. Avoid using abrasive detergents and sharp objects. Avoid moving on dusty, sandy surfaces and puddles.

WARRANTY:

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for major failure and for compensation for any reasonably foreseeable loss or damage. You are entitled to have the goods repaired or replaced if the goods fail to be acceptable quality and the failure does not amount to a major failure (defective goods). Arkin will repair or replace such defective goods for up to 5 years from the date of purchase. This warranty is against defects in the goods purchased and does not cover damage caused by the incorrect use or installation of the goods, or by modifications, or by accident. To claim under the warranty you need to return the product to the place of purchase (at your expense) with a valid proof of purchase. If you are not able to return the product to the place of purchase you can contact Arkin via info@arkin.com.au

ARKIN

www.arkin.com.au
info@arkin.com.au

We reserve the right to modify or alter instructions.
No modification or alteration without formal notice.